


Installing the Optional Vertical Table Accessory

1. Remove battery from cordless saw or unplug corded model.



2. Set Portaband Pro into the vertical position by disconnecting the pivot ball at the top of gas strut. Position the saw material guide into its most extended position.

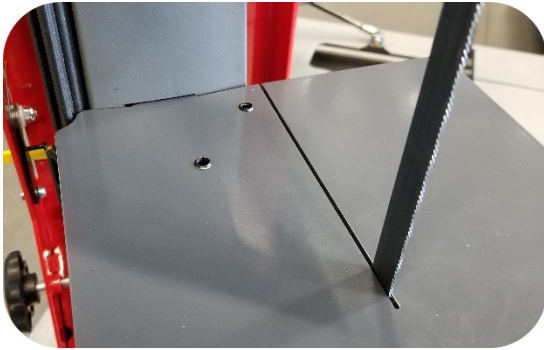

3. Slide the table over the material guide and into the small slot at the back of the saw. Clamp the washer and hand knob to the bottom of the guide.



- 4.** Using the included 4mm hex key, tighten the longer set screw until snug. It should stop slightly below the surface of the table. Pay close attention to keep the blade centered in the blade slot.

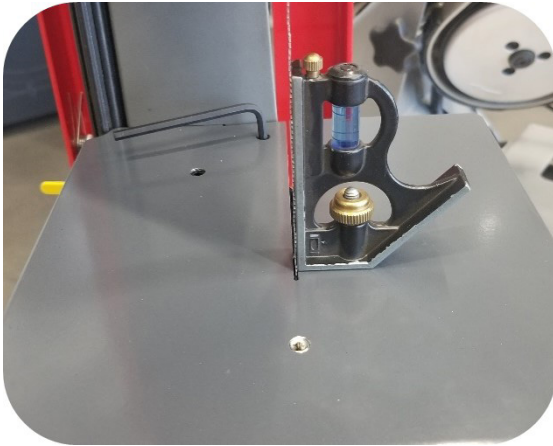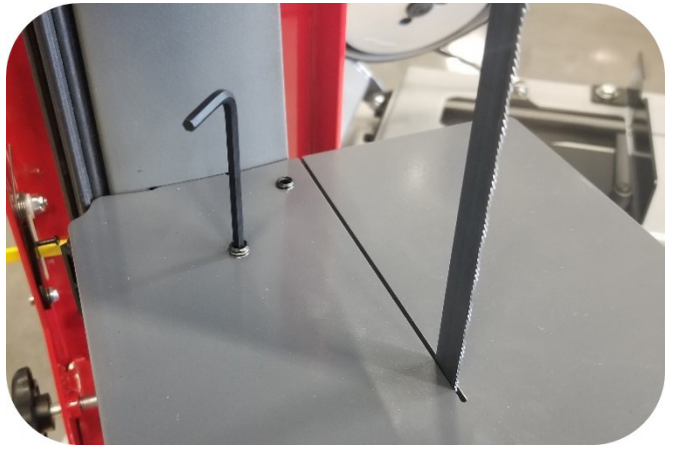

- 5.** Using the same hex key and a small square, tighten the rear-most set screw until the table is square with the blade.
- 6.** Reconnect battery or power cord and test run saw.

Removal

The table accessory can be easily removed by slightly loosening the rear-most set screw and the hand knob under the material guide.